

# Re-pair remote to base



e|Series  
Ergomotion version

Base with Power Down Box



Power Down  
Box button

1. Remove back cover from remote control. Remove and replace batteries.
2. Double click the button on the Power Down Box. The light will illuminate.
3. Press and hold button on the back of the remote. The light will begin to flash then become a continuous solid light. Both lights will turn off; the remote has been paired to the new control box.



e|Series  
Beaudoin version

+ ErgoBox

Pairing the Beaudoin remote



Pair button

1. Unplug the base from power source. Wait 1 minute, then plug the base back in. Execute step 2 within 10 seconds, while the illuminated light on the control box is flashing.
2. Remove the cover on the back of the remote and hold the PAIR button. The PAIR button will illuminate and start to flash. When the PAIR button stops flashing, the pairing LED light on the control box will stop flashing. Release the PAIR button.
3. The remote is now paired to the adjustable base. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again.

## Pairing the Quest serie remote

1. Unplug the base from power source. Wait 1 minute, then plug the base back in. Execute step 2 within 10 seconds, while the illuminated light on the control box is flashing.
2. Press and hold the button(s) on the remote control (according to the model) until the remote's backlight starts flashing. When the backlight stops flashing, the illuminated light on the control box will go out. Release the button(s). The remote is now paired to the adjustable base.
3. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat steps 1 and 2, or call Ergomotion at 1-888-550-3746.

quest 1.5



Rise and  
lower head

quest 2.0



Rise head and  
lower feet

quest 2.5



PAIR button

quest 4.0



Rise head and  
lower feet

# Re-pair remote to base

## DAWN HOUSE

### Pairing the Dawn House remote



1. Disconnect the base from its power outlet. Wait 10 seconds, then plug it back in.
2. Remove the battery cover on the back of the remote control. Press and hold the PAIR button for about 5 seconds until the PAIR button stops flashing. Once it stops flashing, the remote has been successfully paired.
3. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again or call Dawn House customer service: 1-888-DAWNHSE (1-888-329-6473).

## ERGOSportive™


### Pairing the ErgoSportive remote



1. Unplug the Power Cord from your power outlet. Wait 1 minute, then plug it back in to your power outlet. Perform step 2 within 10 seconds, while the control box light is illuminating.
2. Remove the cover on the back of the remote and hold the PAIR button. The PAIR button will illuminate and start to flash. When the PAIR button stops flashing, the pairing LED light on the control box will stop flashing. Release the PAIR button.
3. The remote is now paired to the adjustable base. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again.

## RIO

### Pairing the Rio remote

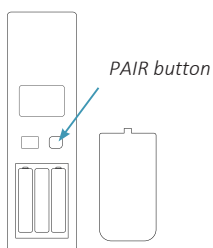

1. Unplug the Power Cord from your power outlet. Wait 1 minute, then plug it back in to your power outlet. Perform Step 2 within 10 seconds, while the control box light is flashing.
2. Remove the cover on the back of the remote and hold the PAIR button. The PAIR button will illuminate and start to flash. When the PAIR button stops flashing, the pairing LED light on the control box will stop flashing. Release the PAIR button on the remote.
3. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again or call Ergomotion customer service: 1-888-550-3746.

## CHILD LOCK

### ACTIVATE CHILD LOCK

Press and hold the **HEAD UP** and **FLAT** buttons together for 3 seconds until the remote backlight flashes twice. When a button is pressed in Child Lock mode, the backlight on the remote will flash twice.

### DEACTIVATE CHILD LOCK

Press and hold **FLAT** and **FOOT UP** buttons for 3 seconds. When the backlight on the remote flashes 2 times, that means the unlock is completed. The remote will now operate normally.